

INSTRUCTIONS FOR CAPRI TRACK

Part No. 715593101

CP210 (THROUGH CEILING CONNECTOR/POWER FEED) TWO CIRCUIT

IMPORTANT SAFETY INSTRUCTIONS

This Track Connector is for use only with Capri Lighting's "CT" series track system. Care must be taken to see that Capri Track and all connections have been installed in accordance with their instruction sheets, and that the electrical system has been tested before installing fixtures.

DESCRIPTION: Surface mounted ceiling feed connector for electrical power supply to two circuit track system under outlet box.

Assembly:

1. Make sure power is off. Remove connector cover by removing single cover screw.
2. Secure conduit or non-metallic cable with proper fittings to the connector.
3. Insert connector to the end of track and tighten set screw. Secure track to the ceiling.
4. If track is to be used as a two circuit track, attach black load wire to screw terminal marked L.
5. Attach neutral wire to screw terminal marked N located diagonally from the black lead screw terminal (indicated by the molded in diagonal lines).
6. Attach red lead wire to remaining screw terminal marked L.
7. Attach remaining neutral wire to screw terminal marked N located diagonally from the red lead screw terminal (indicated by the molded in diagonal lines).
8. If required (e.g. for non-metallic cable) fasten ground wire to green screw terminal.
9. Install cover with small pin by sliding cover into position so that pin is behind metal plate. Fasten cover with screw.

NOTE:

When installing or using Capri Track system, basic safety precautions should always be followed. Read all instructions.

WARNING: RISK OF ELECTRICAL SHOCK OR FIRE:

NEVER

- install track to any vertical surface (e.g. walls, vertical beams, columns, door frames). Fixtures may not remain secure, electrical components may be exposed, and hot fixtures may come in contact with persons or combustibles.

NEVER

- install track in wet or damp locations;
- install any part of the track system less than 5 feet above the floor;
- install any fixture assembly closer than 6 inches from any curtain or similar combustible material; or
- attempt to connect power tools, extension cords, appliances or the like to the track.

ALWAYS

- disconnect electrical power before adding to or changing the configuration of the track.

WARNING: RISK OF FIRE. FAILURE TO TIGHTEN ALL CONNECTIONS ON TRACK POWER SUPPLIES, TRACK CONNECTORS, PENDANT KITS, CANOPIES, AND ANY OTHER ELECTRICAL TRACK COMPONENT MAY RESULT IN EXCESSIVE TEMPERATURE AT THE CONNECTIONS CAUSING SPARKS AND/OR FIRE.

SAVE THESE INSTRUCTIONS

capri
L I G H T I N G

Capri Lighting
776 South Green Street
Tupelo, MS 38804
662-842-7212
662-841-5501 fax

Canadian Division
189 Bullock Drive
Markham, Ontario L3P 1W4
905-294-9570
905-294-9811 fax

